

Go!Control

HOW TO BYPASS ZONES

Bypassing Zones

- ▶ At times the customer may need to arm the system while leaving a zone open, such as a window.
- ▶ In that instance, you would need to bypass a zone to arm the system.

Bypassing Zones

1. If any sensors are open while the arm button is pressed, the Go!Control panel will display the bypass sensor screen.



Bypassing Zones

2. Press **Bypass All** to force bypass the open sensors.



Bypassing Zones

3. When the system is disarmed, the forced bypassed sensors will be returned to normal.

