

Go!Control


ONSCREEN TROUBLE ALERTS

Onscreen Trouble Alerts

- ▶ If the system detects trouble, it will flash the Trouble Alert icon on the security screen and sound six alert beeps every minute.
- ▶ Scrolling text along the top of the display also describes the trouble that exists.
- ▶ The Trouble Alert icon displays a number in the upper right corner that is the number of current trouble alerts.

Onscreen Trouble Alerts

1. The Trouble Alert icon will flash until the trouble alerts are acknowledged. Then, it will light constant until all the troubles are corrected.

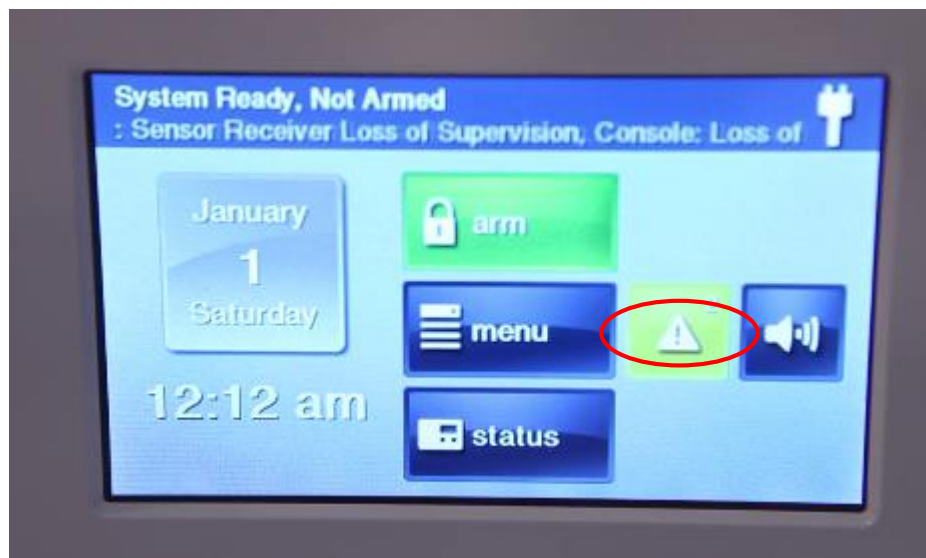

Onscreen Trouble Alerts

2. When all troubles are corrected, the icon will disappear.



Onscreen Trouble Alerts

3. Press the Trouble Alert icon button to display all current trouble alerts. After viewing the trouble events, press OK to acknowledge. This will silence the alert beeps.



Onscreen Trouble Alerts

4. As an option, the system can be programmed by your installer to suppress the Trouble Alert sounder from 10pm-9am.
 - Any trouble alerts will still be displayed and reported, but the sounder will not beep.
5. Some trouble conditions may clear automatically, other trouble conditions may require service to correct.